Termination Bar Extender
Installation Instructions
Window Head- Loose Lintel with Spray Foam

1:

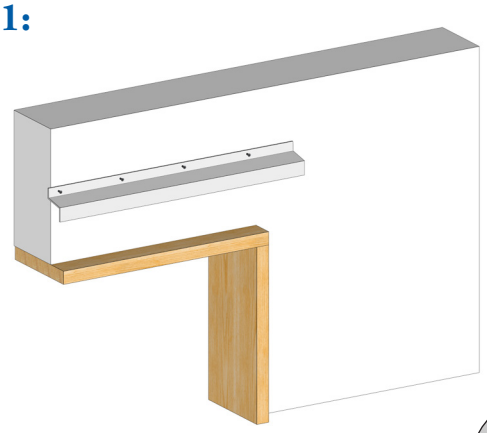

Determine the height you want your flashing to be and install the Termination Bar Extender at this location.

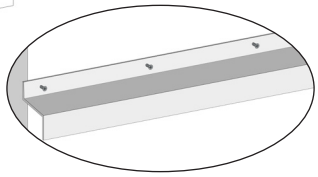

Steel Studs: Use blocking to attach in between the studs

2:

Install the MaxSeal transition membrane starting from the outer horizontal edge of the Termination Bar Extender.

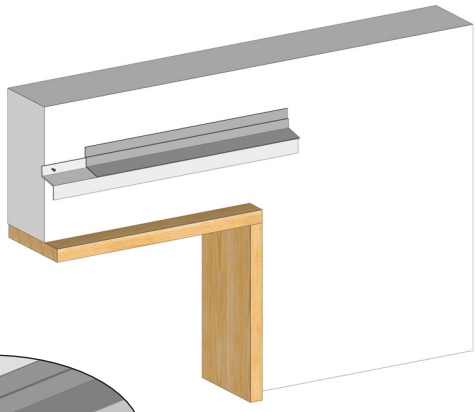

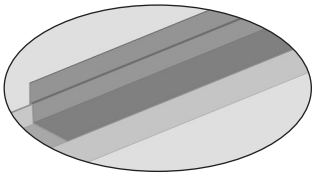

3:

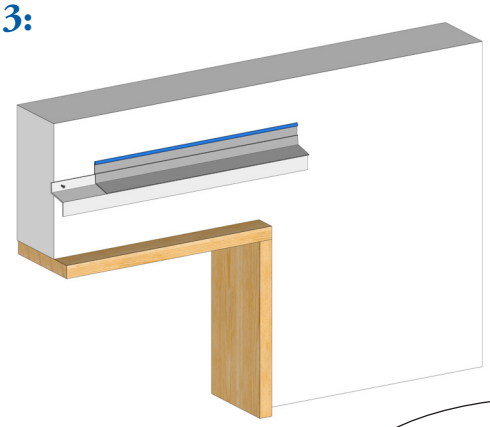

Use a compatible sealant or T-96 Termination Bar to terminate the MaxSeal transition membrane.

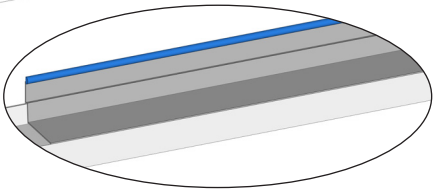

4:

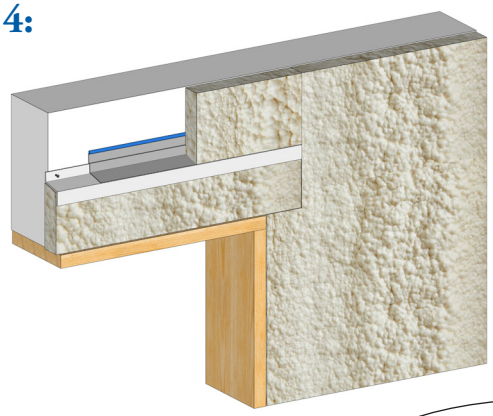

Install the spray foam insulation above and below the Termination Bar Extender

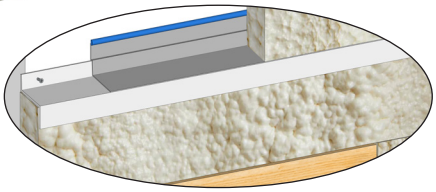

5:

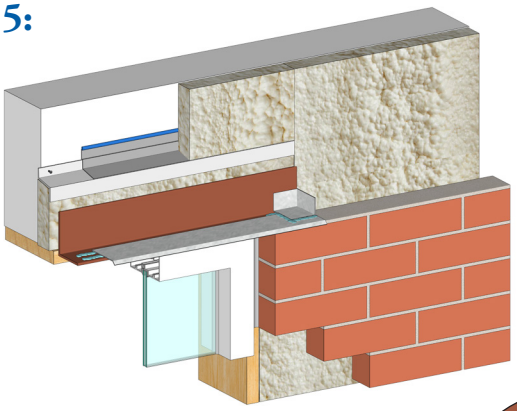

Install the masonry, lentil, window, and through-wall flashing accessories with a compatible sealant.

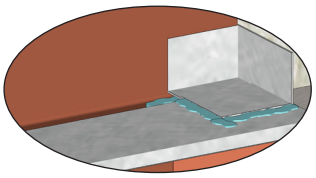

6:

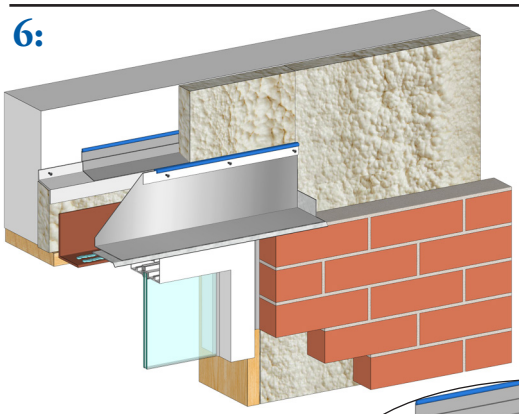

Install your desired TWF on the downward leg of the Termination Bar Extender using a flat Termination Bar.

Fasten every 8" on center and seal the flat termination bar with a compatible sealant

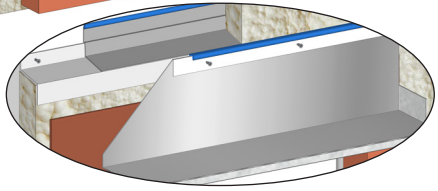

YORK Flashings™