





1: APPLY TWO CONTINUOUS ROWS OF US-100 SEALANT ALONG THE EDGE, AND INSTALL STAINLESS STEEL DRIP EDGE ON TOP OF SEALANT. PLACE US-100 SEALANT NEAR CORNER TO RECEIVE PREFORMED INSIDE CORNER.

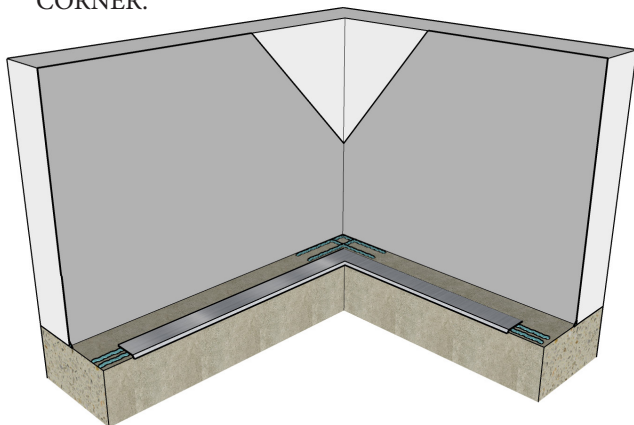

2: APPLY US-100 SEALANT CANT BEADS AT BASE. PLACE PREFORMED OUTSIDE CORNER ON TOP OF US-100 SEALANT.

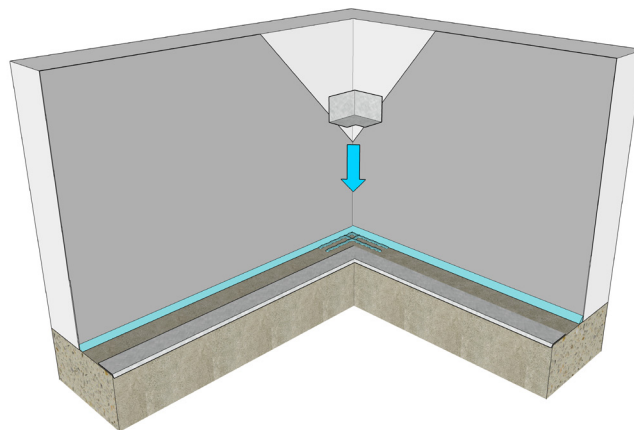


3: SEAL PREFORMED CORNER WITH US-100 SEALANT. LAY WICKED GOOD FLASHING IN PLACE.

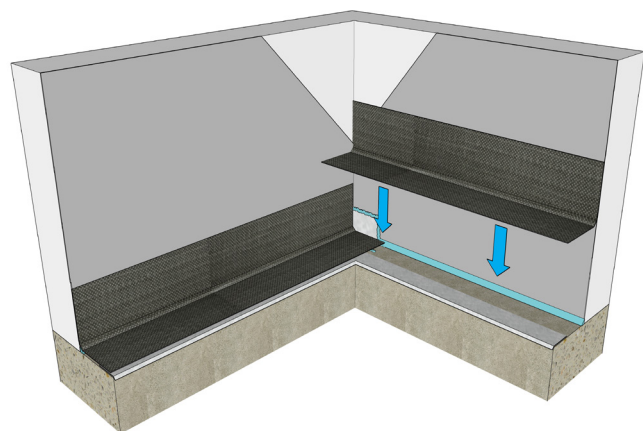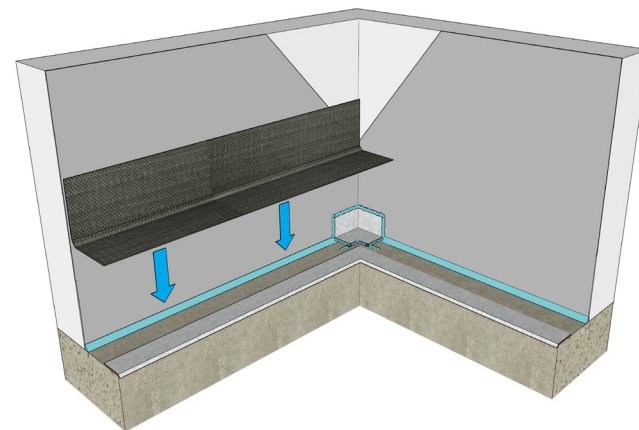


4: REPEAT SEALANT INSTALLATION PER STEP 3. AND PLACE WICKED GOOD FLASHING WITH ONE PIECE OVERLAPPING THE OTHER AS SHOWN. ROLL WICKED GOOD FLASHING WITH HARD ROLLER.

5: INSTALL TERM BAR AND MECHANICALLY FASTEN WITH APPROVED FASTENERS w/ NEOPRENE WASHER @ 8" O.C., AND WITHIN 1" OF EACH END OF BAR.

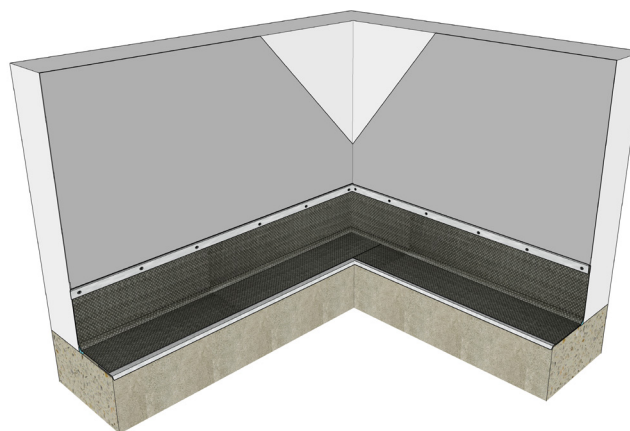

6: APPLY CONTINUOUS BEAD OF US-100 SEALANT ON TOP OF TERMINATION BAR AND TOOL FOR PROPER ADHESION. THEN APPLY US-100 EDGE SEALANT TO DETAIL EDGE OF MEMBRANE @ LAPS AND ENDS.

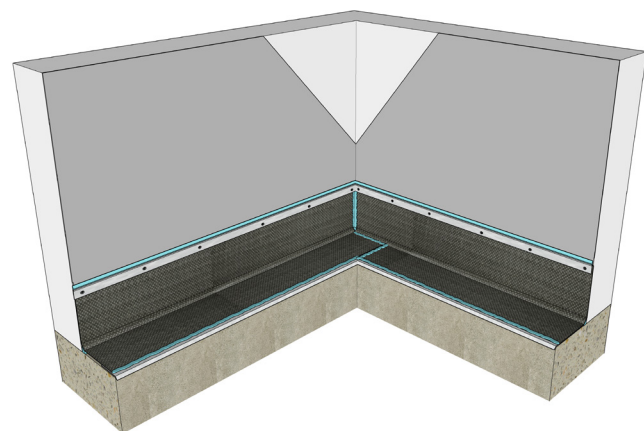

NOTE: EDGE OF MEMBRANE AND EDGE SEALANT SHOULD BE CONCEALED WITHIN EXTERIOR CLADDING. APPLY MEMBRANE 1" FROM DRIP EDGE.

INSIDE CORNER WITH DRIP EDGE DETAIL WICKED GOOD FLASHING

