


York 304 SA

Self-Adhering Stainless Steel


How to Fold an Inside Corner in a Recessed Window

1:

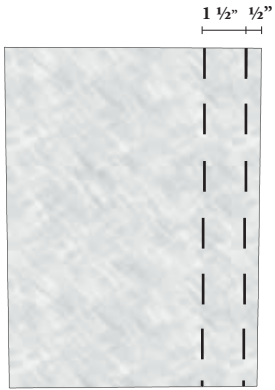


Fold the York 304 SA at the dotted lines (see figure 2)

2:

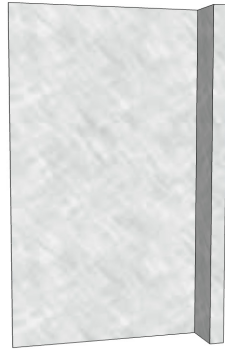


After creasing, lay the York 304 SA flat

7:

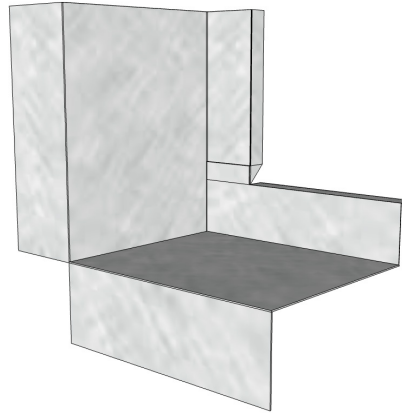


Crease the outside edges. Your corner is now ready to install

3:

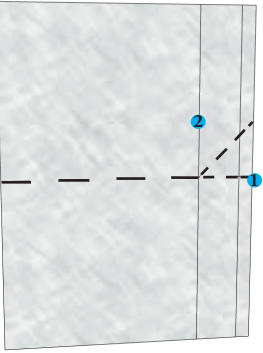

Fold the York 304 SA in half. Pull point 1 to point 2, while creasing on the diagonal dotted line


4:

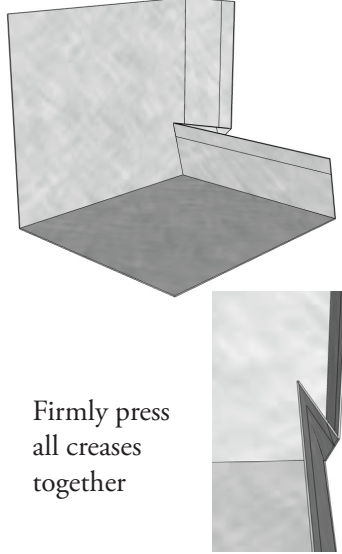


Firmly press all creases together

Required:

Cut a dovetail piece to detail the pinholes locations. (see detail below)

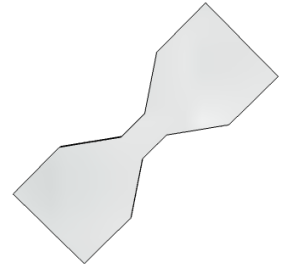


5:


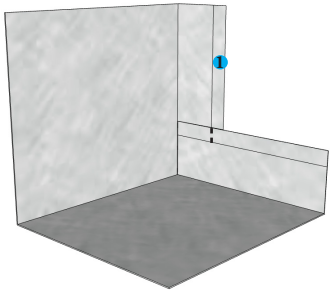


Pull point 1 back. Cut at dotted line.

6:

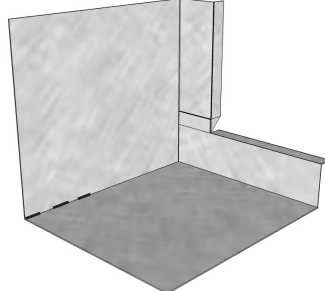

Fold the 2 top flanges back. Cut at dotted line (minimum of 2")

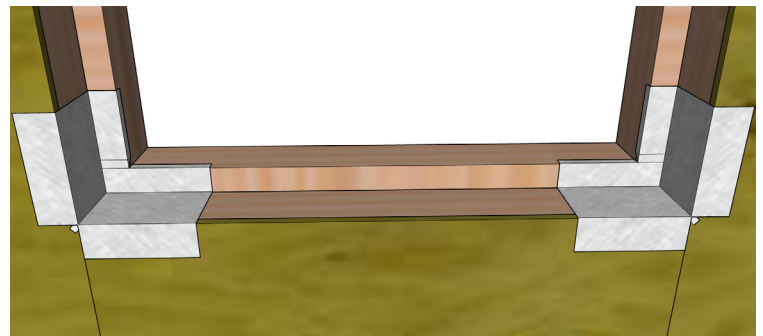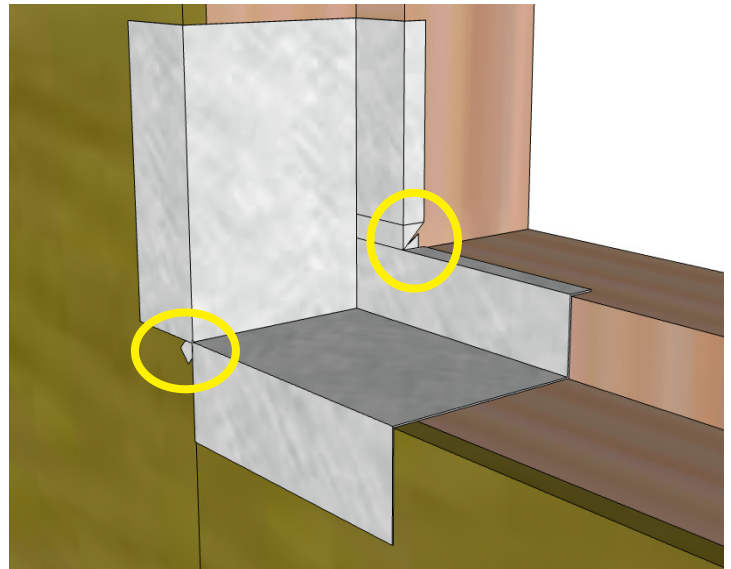

YORK
Flashings™