


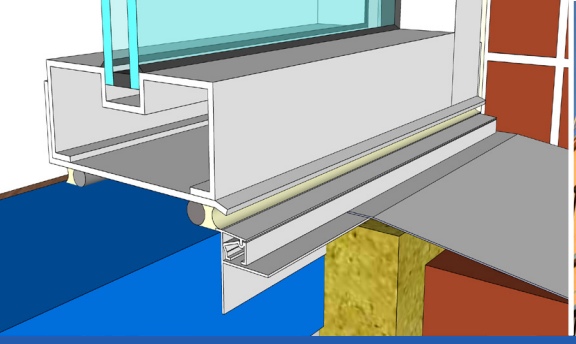

AirSill™ Installation Instructions

Flashing Receiver & Clip

Application


Step 1:

- Secure York AirSill receiver at perimeter of wall opening with adhesive and fasteners
- Verify adhesive compatibility with substrate
- Fully bed AirSill™ receiver in substrate compatible sealant or mastic (recommended)
- Predrill and seal fasteners (recommended)

Step 2: Place flashing into receiver channel

Step 3: Secure flashing with receiver clip

- See York AirSill conceptual details for more information
- Project specific details upon request

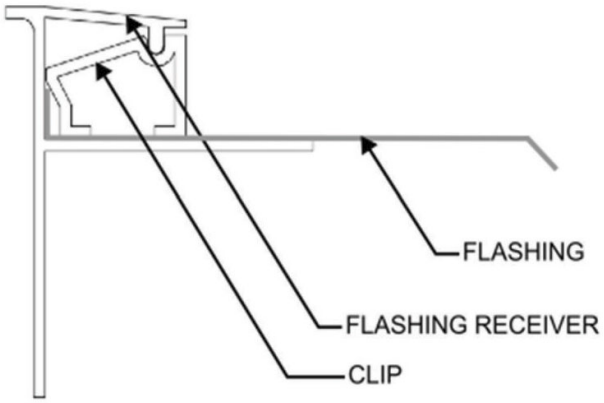

YORK Flashings™